




ISO JOYSTICK BOX
HARDI GRIP ADD-ON

INSTRUCTION
MANUAL


BOX PART NO: 72467304

THUMB STICK FUNCTIONS

- LEFT** Toggle Left fence line nozzle
- RIGHT** Toggle Right fence line nozzle
- PUSH** Enable Auto Height (Norac)

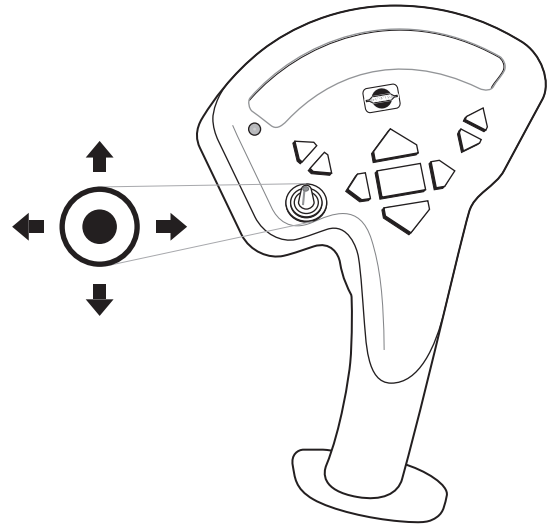

SPRAY & SECTION CONTROL

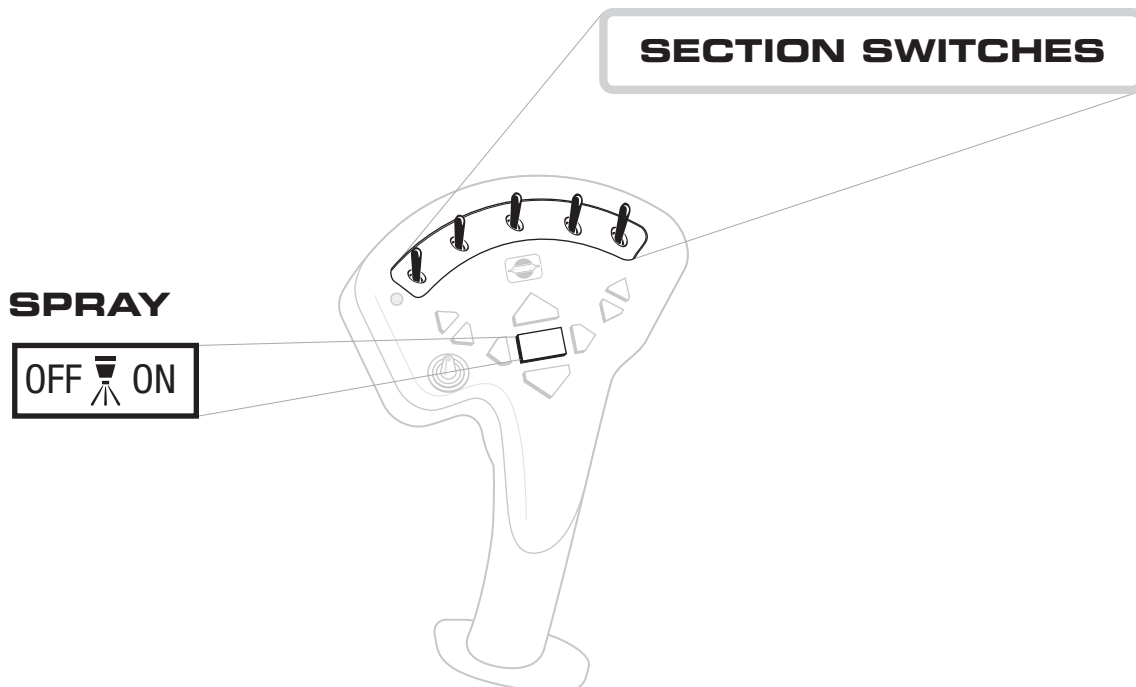



OPERATION MODES

- **SECTION CONTROL WITH MASTER SWITCH**
Configurable section control from grip section switches.
- **MASTER SWITCH ON / OFF ONLY**
Master spray on/off using master switch on the grip.

Follow steps on installation guide to change operation mode.

ADDITIONAL CONTROLS


- **FENCE LINE NOZZLE CONTROL ON THUMB STICK**
- **AUTO HEIGHT ENABLE ON THUMB STICK**




13 or Less Sections



16 Sections

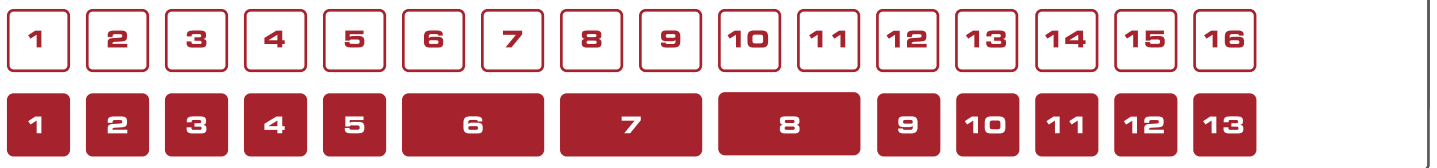

18 Sections

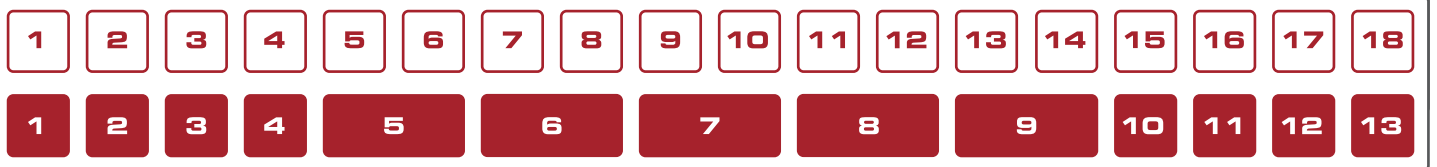

Note: Switch combinations as version 2.1



CONFIGURATION STEPS

CHANGE OPERATION MODE

1. Push and hold thumbstick to **UP** for **10 sec** or until fence line nozzles toggles.
Alternatively, press and hold top button at the rear of the joystick for **10 sec**.
2. Operation mode will toggle between **Section Control** and **Master ON/OFF**.

SET NUMBER OF SECTIONS ONLY FOR SECTION CONTROL

1. Ensure that all the switches on the grip are set to the OFF state.
2. For **Sections upto 13**, Keep all available Switches **OFF**.
For **16 Sections**, Turn **ON Switch 8** and leave rest **OFF**.
For **18 Sections**, Turn **ON Switch 9** and leave rest **OFF**.
3. Press and hold the **Master Spray Button** for **5 seconds** to save your section selection.

READY TO SPRAY!

SECTION CONTROL MODE

How to verify number of sections?

Activate the last switch on the grip in order to turn on the last section.

How to enable in UT ?

Navigate to the Joystick settings and activate the "ME-Setbox" option.

Refer Page 6-8 - Müller Instructions

How to check connection?


Look for S_Box icon on Home Screen

ISO JOYSTICK BOX

MÜLLER UT S-BOX ENABLE




1.

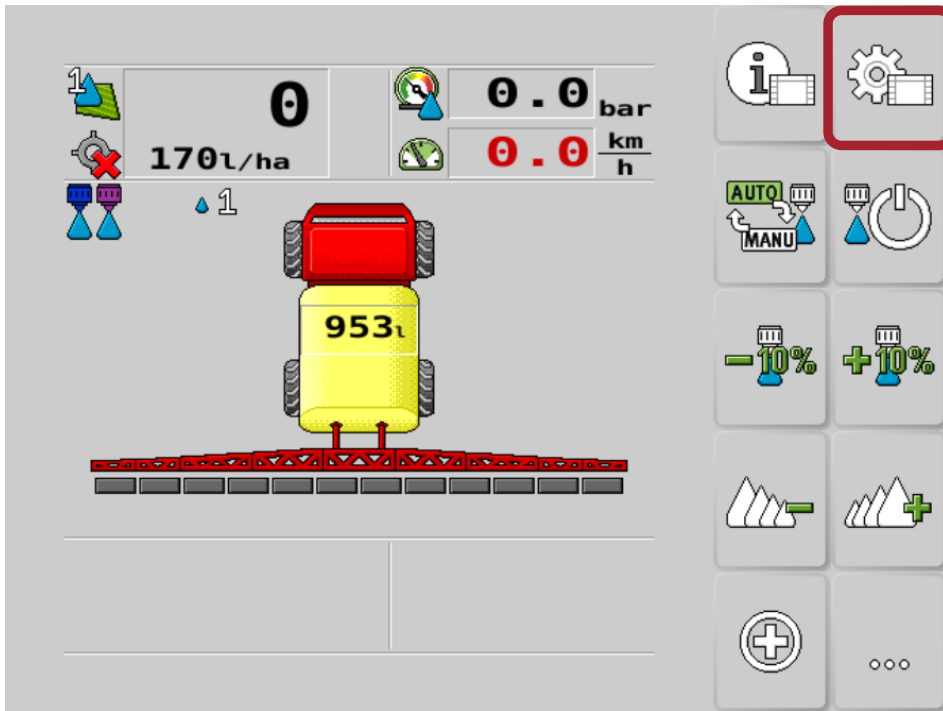


- Tap Setting Icon

2.

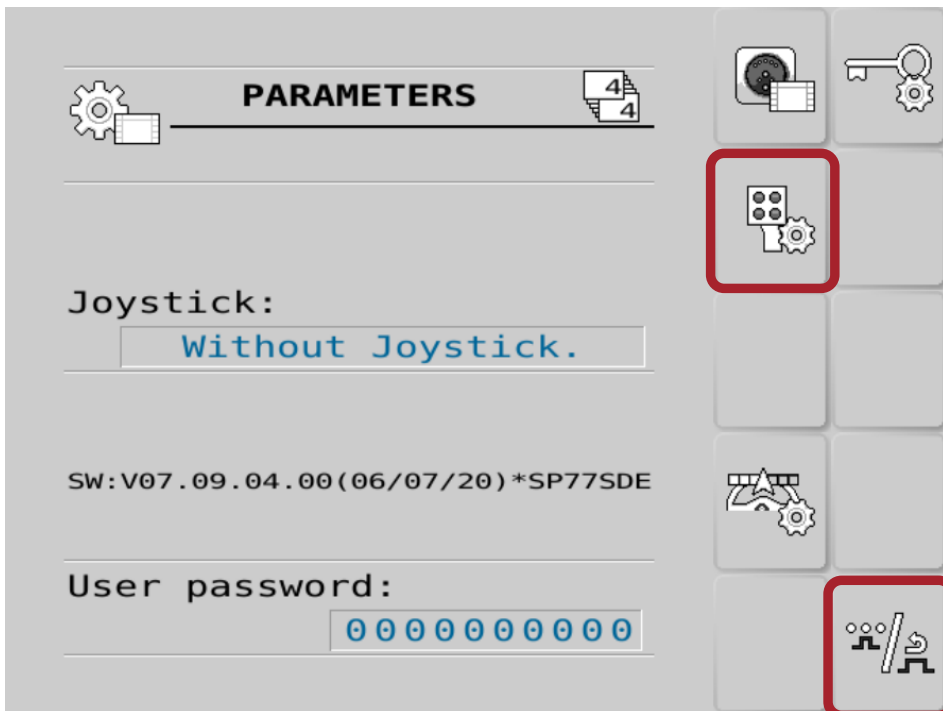


- Navigate to Page 4
- Tap Grip Icon

3.

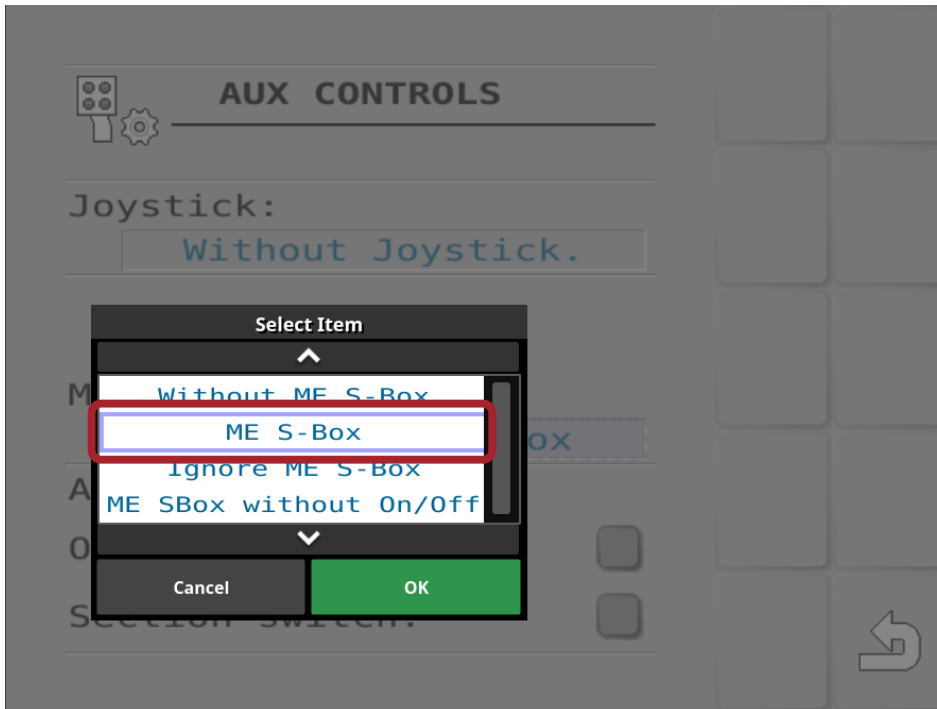


- Tap ME S-Box
- Select ME S-Box
- Tap OK

4.

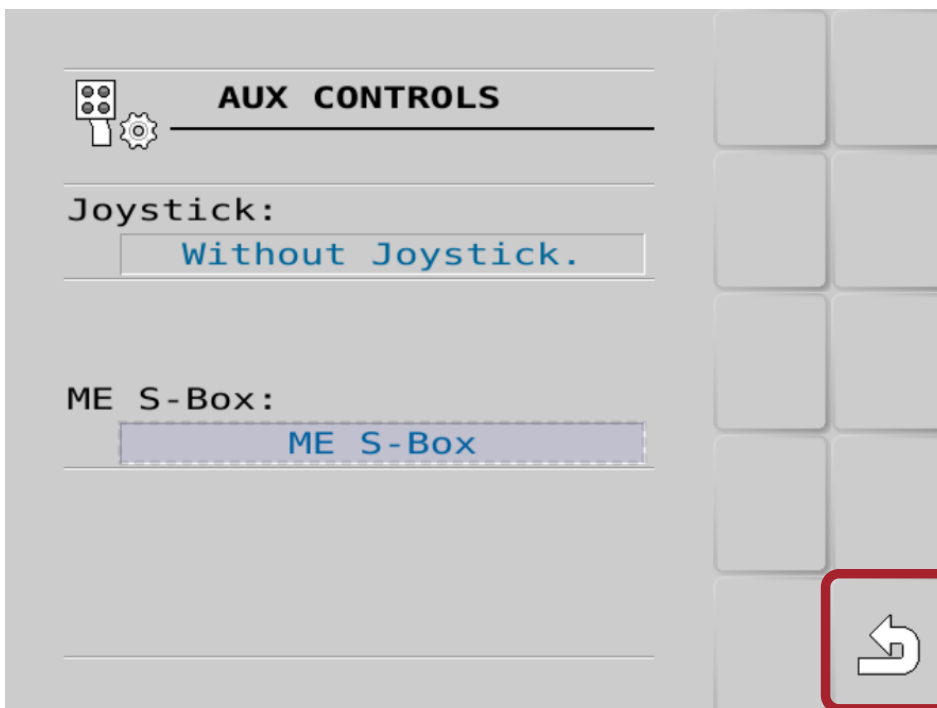

- Tap Back

5.

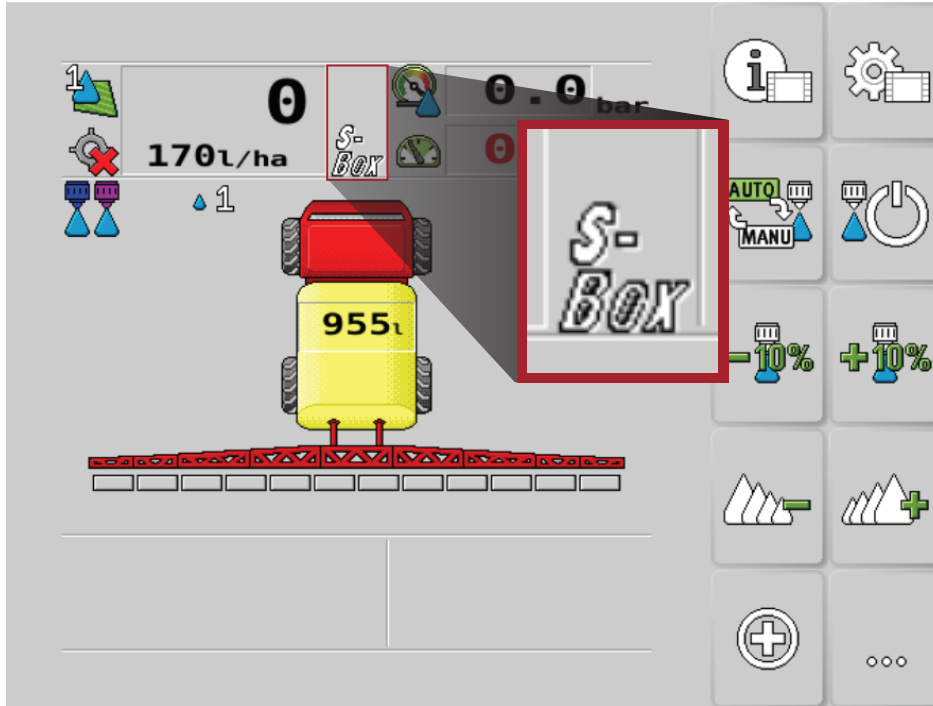

- Check for **S-BOX** Icon while Joystick Box is connected.

This function will allow to control sections through Section Switches on Joystick.